※ Please note that customers are responsible for any connection data charges from downloading this manual

すみっコぐらし™

Pet it! Walk it! Change it! Take care of it!

6 Years & Above

© TOMY

TAKARA TOMY®

すみっコフレンド
Sumikko Friend

Gameplay Manual

単4形アルカリ乾電池2本使用(電池は別売りです。)
REQUIRES 2 LR03 ("AAA"SIZE) BATTERIES (NOT INCLUDED)

●写真やイラストはイメージです。実際の商品とは異なる場合があります。

©2023 San-X Co., Ltd. All Rights Reserved.

contents

※ Check that the set contents are complete.

- x1 Sumikko Friend Device
- x1 Sumikko Cover (Shirokuma)
- x1 Sumikko Cover (Tokage)
- x2 Ball Chains
- x1 Neck Strap
- x1 Instruction Manual

⚠ Noting else is included aside from the above contents.

LCD	1.44 inch TFT LCD
Resolution	LCD Display 128 x 128
Continuous use time	Approx 4 hours with fresh alkaline batteries (Depends on usage)

⚠ Warning

Parents, please read

The device contains small parts, Not suitable for children under the age of 3 as it may pose a choking hazard.

⚠ Notice

Please read the instruction manual carefully before use. Avoid using it for a long time, and take proper rest. Do not play in the dark. Keep out of reach of children under the age of 3. Do not cover your head or face with a plastic bag. Do not wrap the strap around your fingers, as it is dangerous if the blood flow is blocked. Batteries may generate heat, explode, or leak. Please note the following: Never use rechargeable batteries. Do not mix old and new batteries or different type of batteries. Set the + and - correctly. Be sure to remove the batteries when you do not play for a long time. Do not short-circuit, charge, disassemple, heat or put in fire. Should the liquid leaking from the battery get into your eyes, immediately wash your eyes with plenty of water and consult a doctor. If it gets on your skin or clothes, wash it off with water. When disposing of the product, please follow the instructions of the local government for waste disposal.

English Manual Translated by Rachel Liew for Fuzzy N Chic
(original Japanese copy: https://www.takaratomy.co.jp/products/sumikko/goods/pdf/sumikkofriend_manual.pdf)
www.fuzzy-n-chic.com
Your one stop shop for all your Tamagotchi needs.
Free Tamagotchi downloads, guides, & resources!

1 Name of Parts

Touch Sensor

Touch within the dotted line. (Used for operations such as Cancel, Games, and Touch Bonding in Friend Mode)

Device

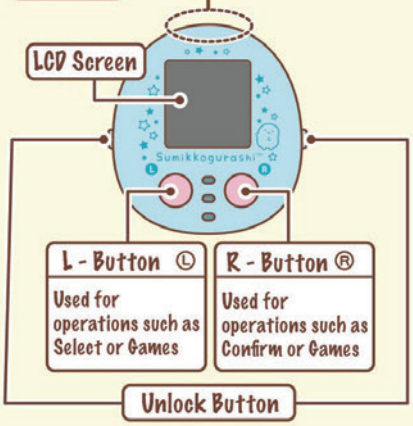

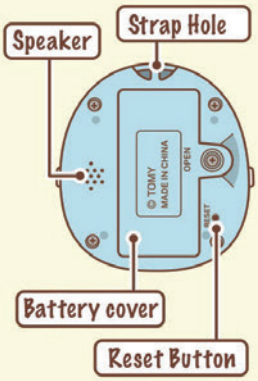

Sumikko Cover (2 kinds)

※ It's possible to remove the pre-attached Ball Chain.

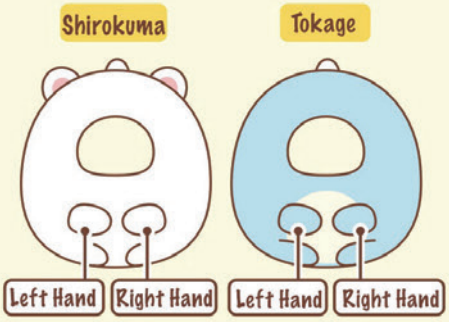

Power On & Off

- Press R - Button Ⓡ for approximately 3 seconds: Power On
- Press R - Button Ⓡ for approximately 3 seconds: Power Off

※ When using the Sumikko Cover, press the Right Hand for approximately 3 seconds.

※ When no buttons are pressed for approximately 1 minute, it will automatically turn off.

Resetting

Lightly press the Reset Button with a thin stick.

※ Even if the Reset Button is pressed, the saved data will not be deleted.

2 Before Starting to Play...

Inserting Batteries

1. Remove the Battery Cover on the back of the device. (Use a + shaped screwdriver to loosen the screw)
2. Use 2 AAA alkaline batteries (sold separately). (Align the + and - battery terminals correctly)
3. Put the Battery Cover back on and tighten the screw.

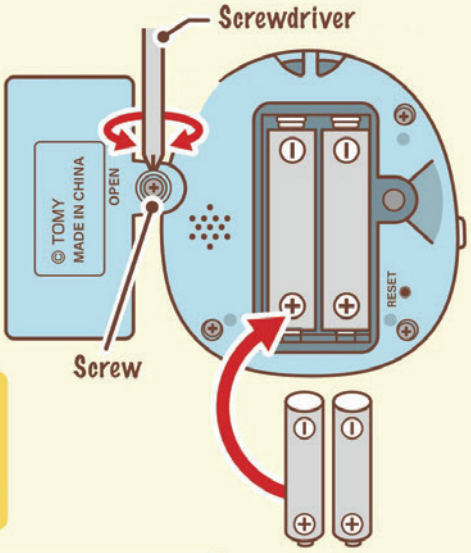

- Have a guardian perform the battery installation.
- Please use new alkaline batteries.
- When changing batteries, make sure all batteries are new.

Time to Change Batteries

- When the image on the right is displayed, change the batteries.
- When the volume becomes soft or when the screen becomes dark, please change the batteries.

※ After inserting batteries, press the Reset Button

3 Attaching the Strap

Device

Thread the thin end of the neck strap through the Strap Hole.

Strap Hole
Attach the Neck Strap here.

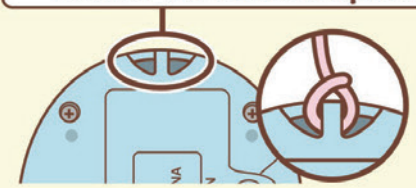

※ To detach the neck strap from the ball chain, perform the same steps by pressing your finger on the area indicated by the red arrow.

Sumikko Cover

Press your finger on the area of the hook indicated by the red arrow to attach the neck strap to the ball chain.

⚠ When the Sumikko Cover is attached on the device, don't swing the neck strap & ball chain around. Also, if you carry both the device and the Sumikko Cover with a neck strap, be sure to attach the thin string to the main unit, and attach the ball chain on the Sumikko Cover to the hook on the neck strap.

※ If the ball chain comes off the Sumikko Cover, reattach it by following the steps below.

If the upper part of the Sumikko Cover comes off..

Insert the top part of the cover in the direction shown in the picture, and push all the way in.

When viewed from the side, insert the dented side into the cover.

If the ball chain is detached from the hole...

If the ball chain drops from the hole on the top of the Sumikko Cover, hook the tip on the notch of the metal connector and pull it lightly.

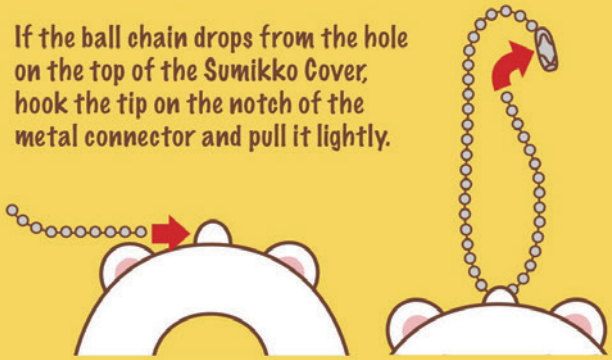

⚠ The ball chain can be moved freely, but the Sumikko Cover's top part cannot be dismantled because there will be risk of damage.

4 Put on & Remove Sumikko Cover

Put on

According to the diagram, put the Sumikko Cover over the main unit. Push until you hear a click.

Remove

While pressing the Unlock Buttons on left and right side of the main unit, remove the Sumikko Cover.

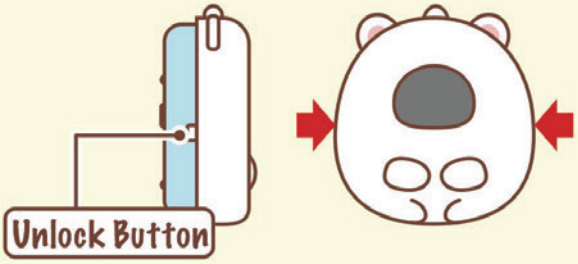

5 Initial setup

※ You will not be able to see the initial setup screen if the Sumikko Cover is on the main unit. After inserting batteries, be sure to remove the Sumikko Cover in order to enter the initial setup.

Date

1. First, input the Year. Press the L - Button to select the year, then press R - Button to confirm.
2. Set the Month and Day the same way as you did in step 1

Time

1. First, input the Hour. Press the L - Button to select the hour, then press R - Button to confirm.
2. Set the Minute the same way as you did in step 1

Birthday

1. First, input the Month. Press the L - Button to select the hour, then press R - Button to confirm.
2. Set the Day the same way as you did in step 1

After completing all the settings, we are ready to play!

※ If the initial setup is not completed, even if the Sumikko Cover is put on the main unit, it is not playable. Be sure to complete the initial setup before putting on the Sumikko Cover.

※ During setup, if you want to return to the previous step, touch the top part of the main unit to cancel.

6 Standby screen (without Sumikko Cover)

When the Sumikko Cover is removed, the time and date is displayed on the Standby Screen.

Date is displayed

Time is displayed

Pressing the R - Button brings you to the Main Menu

On Special Days, special events will happen on the Standby Screen! Check your device diligently so that you don't miss them!

Sumikkos will greet you on your birthday!

Floating balloons may appear as a surprise?!

7 Game Mode & Friend Mode

You can enjoy 2 types of play modes, depending on whether the Sumikko Cover is used!

Without Sumikko Cover

Game Mode

Sumikko's rooms and Minikkos are displayed on the LCD screen. You can play with them by using the touch sensor and 2 buttons.

CHANGE!

※ When the LCD screen goes dark while Sumikko Cover is used, there will be no response if you stroke the body. Press the right hand for 3 seconds to turn on the screen.

With Sumikko Cover

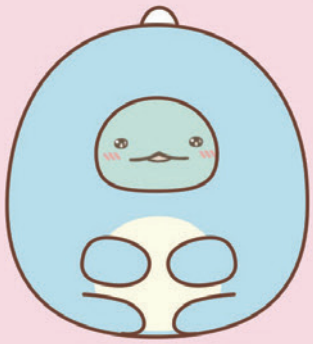

Friend Mode

When using Sumikko Cover, the LCD screen will switch to Sumikko's face. If you stroke or rock it, Sumikko's facial expressions will change!

TOUCH BONDING Sumikko reacts to physical touch actions!

Through touch bonding, Sumikko's reactions will change. Check details on Page 13, ⑫ Friend Mode.

8 Main Menu

※ Access the Main Menu via Game Mode (without Sumikko Cover)

From the Standby Screen, press the Confirm Button to enter Main Menu. Use the Select Button to scroll through the menu options and press Confirm Button to confirm the selection.

Mini Games
You can play games

Library
You can check collected Sumikkos & items

SUMIKKOS' ROOMS
You can play with Sumikkos in their rooms

SUMIKKO MARKET
You can buy things

SETTINGS
You can change basic settings here

SUMIKKO COLLECTING
You can catch Sumikkos

※ From Main Menu, touch the top of the device to return to the Standby Screen.

9 Sumikko Rooms

※ Access Sumikko Rooms via Game Mode (without Sumikko Cover)

You can visit Sumikkos' Rooms from the Main Menu. Press the L - Button to alternate between Shirokuma's and Tokage's rooms.

Shirokuma's Room | Tokage's Room

Friendship Meter

You can check the Friendship Meter from this icon.

You can check the Friendship Meter from the "Friend Check" icon of the Care Menu. More details about "Friend Check" can be found on Page 10.

About Friendship Meter... It represents your relationship with Sumikkos.

If you play a lot of Mini Games and Friend Games with Sumikkos and max out Closeness, the Friendship Meter will increase by 1 Rank!

- More details about Friendship Meter and Closeness can be found on "Friend Check" of Page 10!

If you take care of them and play with them, the **Friendship Meter** will rank up!

When the Friendship Meter increases, this happens!

The variety of Sumikkos that can be caught via "Sumikko Collecting" increases.
You also get more design options that you can use to redecorate rooms!

In Sumikkos' Rooms, you can take care of Sumikkos and play games!

In "Sumikkos' Rooms", press the Confirm button to display the Care Menu. Press L - Button to choose the type of care, then press R - Button to confirm.

Food

You can feed Sumikkos food that you have obtained or bought.

Use the L - Button to choose the food you want to feed, then press Confirm Button. Select あげる and press R - Button to feed Sumikkos!

There are different reactions to food that are "Liked", "Indifferent", or "Disliked"!

Identify Sumikkos' favorite foods! If Sumikko is full or it is a disliked food, they won't eat it.

- Foods that are labeled [?] cannot be selected until unlocked from Sumikko Market.
- Rice Ball need not be purchased and can be fed infinitely. All other food will decrease as you feed them.
- You might obtain food from special events or from outings!

Cleaning

When dust appears in Sumikkos' rooms, clean it.

Shake the device to clean the room! If you neglect cleaning, a giant dust ball might appear?!

Bath

When Sumikkos become dirty, bring it to the bath.

Move the device up and down to scrub Sumikko!

Press the left or right button to rinse the soap suds away.

※ When shaking the device, be careful not to touch the top touch sensor!

Remodel

You can remodel Sumikkos' rooms by changing furniture or design.

Press L - Button to choose between かぐ (Furniture) and おへやのデザイン (Design). Press R - Button to confirm the selection.

- Furniture or Designs marked [?] cannot be used until they are unlocked.
- Some of the furniture can be bought from Sumikko Market.

Changing Furniture

You can place 1 furniture on the left. Press L - Button to choose and press R - Button to confirm.

- Some furniture can only be obtained from outing.

Changing Design

You can change the interior design of the room. Press L - Button to choose and press R - Button to confirm.

- Some designs can only be obtained after increasing Friendship Meter!

Toys

You can give Sumikkos toys to play with.

Use L - Button to choose the toy, then press R - Button to confirm. Select つかう by pressing R - Button. Sumikko can be seen playing with the toy on Standby Screen.

- Toys marked [?] cannot be used until unlocked.
- Some of the toys can be bought from Sumikko Market.
- Some toys can only be obtained from outing.

Sumikkos have requests!

Somtimes, Sumikkos will have requests. Check the speech bubble to see what they need.

If you don't take care of Sumikkos...

If you don't take care of Sumikkos, they will leave their room. Sumikko will leave a note on the Standby Screen. Select さがしにいく to search for the Sumikko and bring them home!

POINT Sumikkos are doing various activities in their rooms!

If Sumikko is sulking, it might hide in bed...

※ Sumikkos sleep from 20:00 to 05:59.

If Sumikko is in a good mood, it might be playing with toys!

If they're in a good mood, other Sumikkos or Minikkos might visit!

- Check out Page 13 of 12 Friend Mode!

Outing

While using Sumikko Cover, if you walk a lot, you can get various items.

Press L - Button to select はい then press R - Button to confirm.

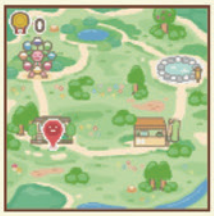

When the Map appears, use any Sumikko Cover!

Outing Starts!

While Sumikko Friend is hanging around your neck, lets go for a walk!

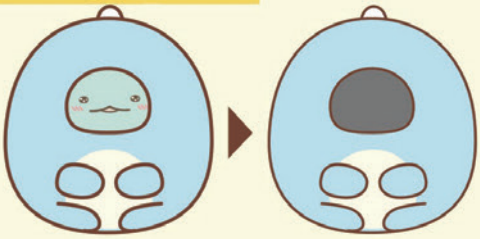

When Sumikko's happy face disappears, the step counter starts.
(It's not an actual pedometer, so the steps are not recorded.)

⚠ While using the Sumikko Cover in Outing mode, the display screen is turned off. If the right hand is long pressed, Sumikko's happy face is displayed for a short while.

When Outing Ends

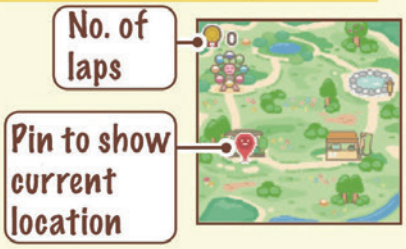

After removing Sumikko Cover, long press R - Button to display the map.

Touch the top of the device. おうちにかえる? (wanna go home?) appears. Select はい to end the outing and go home.

- The position of the pin on the map changes depending on how many steps are taken.
- The number of laps the pin circles the map is displayed on top left.

※ On the next outing, the pin will start before the current position.
※ As long as the device is not reset, the laps on the map will continue to increase.
※ If the steps are too few, you won't obtain any items during the outing.

If you get an item during the outing, the corresponding icons will appear on the おうちにかえる? (wanna go home?) screen!

You can get any of the various types of items: Food, Trap, Toys, or Furniture!

If you obtained an item, before Sumikko returns to their room, a "Get Item" screen will be displayed.

There are some items that can only be obtained from outings. If you don't walk a lot, you won't get items! Let's look forward to see what item you'll get next!

Friend Games

While using Sumikko Cover, you can play Friend Games.

Use the L - Button to choose the game, then press R - Button to confirm.

Select あそぶ (play), and you'll start the game with the Sumikko whose cover you are using. If you select せつめい (how-to-play), a quick guide will appear.

Imitating Freeze

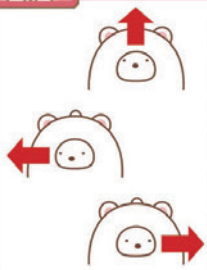

First, Sumikko moves its face to the rhythm. Then, the same rhythm repeats, so try to imitate the same by tilting the device up, right, or left. The game is cleared when you get 3 correct tries!

Look This Way!

If you move the device in the same direction as Sumikko's face, it will be happy! The number of SumiCoins you earn depends on how many times you were successful.

Frilly Dancing

When the game starts, shake the device up and down a lot! The amount of SumiCoins you earn depends on how much you shake it. Aim for a new record!

Minikko Hide & Seek

Minikkos are hiding. Move the device right and left to seach for them! The closer you get to a Minikko, the faster the rhythm gets! When a Minikko is found, Sumikko's face will smile. Touch its head to clear the game!

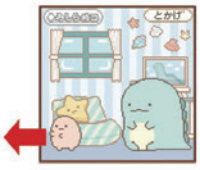

Before putting on the Sumikko cover, Minikkos disappear from the rooms.

After putting on the Sumikko cover, tilt the device right and left.

Smile Stop!

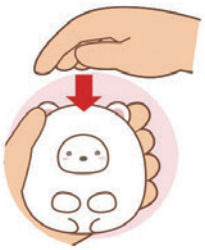

Sumikko makes various facial expressions! When there's a happy face, touch the head to freeze it! If you stop it at a sad or angry expression, points will be deducted.

※ If you remove the Sumikko Cover, the game will stop.

When you clear a Friend Game, you earn SumiCoins! The SumiCoins you earn depends on your performance of the game. Play more to earn more!

Friend Check

You can check the current status of the Friendship Meter!

Friendship Meter

There are 5 Ranks in the Friendship Meter. Play a lot to become best friends!

ふしぎなコ STRANGER → ふつうのコ ACQUAINTANCE → ともだち FRIEND → しんゆう CLOSE FRIEND → だいしんゆう BEST FRIEND

Closeness

When you care for Sumikkos, go for outings, or play Mini Games & Friend Games with them, the Closeness will increase. When the Closeness is maxed out, the Friendship Meter will increase by 1 Rank!

Satiety

When you feed Sumikkos food, the Satiety bar increases.

10 Sumikko Collecting

Using Trap Items, you can catch lots of Sumikkos and Minikkos!

① Choose the Trap you want with the L - Button, then confirm with the R - Button.

- Traps marked [?] cannot be used until unlocked from Sumikko Market.
- Arm Trap need not be purchased and can be used infinitely. All otherTraps will decrease as you use them.
- You might obtain Traps from outings!

② After confirming the Trap selected from ①, Sumikko will appear.

③ On the top of the screen, an action icon will appear. Perform the correct action at the right timing! The meaning of each action icon is listed below.

おして!	Press either the L - Button or R - Button!
れんだ!	Press either the L - Button or R - Button repeatedly! *You can also press L - Button and R - Button alternatingly.
かたむけて!	Tilt the device in the direction of the arrow!
ふって!	Shake the device!

Some Sumikkos can only be caught with specific traps!?

There are some Sumikkos that can only be caught with specific traps...?
Try using various traps and aim to complete the Sumikko Collection Book at the Library!

Success!

If you are successful, you will get a Sumikko! Caught Sumikkos will be recorded in the Sumikko Collection Book at the Library.

Failure...

If you don't get the timing right, the Sumikko will escape. Let's try again!

This might happen!

Sometimes, you may get special characters! When the black screen appers, shake the device.

After catching a Sumikko, you might have a chance to spin gacha!? What item will you get?

11 Mini Games

There are 6 Mini Games that you can play!
Use the L - Button to choose the game that you want to play, then press R - Button to confirm.
Select スタート (Start), and you'll begin the game. If you select せつめい (how-to-play), a quick guide will appear.

※ For your safety, do not play while walking.

- Some games will require you to hold the device upright.
- Aside from "Sumikko Roulette Fortune", all games have Normal and Hard difficulty.

Shirokuma's Apple Harvest

Tilt the device left and right to catch the falling apples! If you are hit by the acorns you can't move; so avoid them!

Penguin?'s Long Distance Run

Tilt the device left and right to make Penguin? collect the stars! Be careful not to fall into the holes and reach your goal!

Neko's Sumikko Eats

Tilt the device up and down to avoid the bushes and reach your goal! Fill your stamina with rice balls and cat food!

Tokage's Gem Collecting

Tilt the device up, down, left, & right to move Tokage towards the gems! If you are hit by jellyfish you can't move; so avoid them!

Tonkatsu's Happy Dance

Fried bits will flow in from left & right according to the rhythm. When they reach the center point, press the L - Button or R - Button!

Sumikko Roulette Fortune

Try the Sumikko roulette to find out your fortune! Press the L - Button or R - Button to spin. Press again to stop the roulette and check your fortune!

When you clear a Mini Game, you earn SumiCoins!
The amount of SumiCoins you earn depends on your performance of the game. Play more to earn more!

12 Friend Mode

When you put on the Sumikko Cover onto the device, it goes into Friend Mode! During Friend Mode, if you pet or shake it, Sumikko will react and its facial expression will change!

Putting on Shirokuma cover

Putting on Tokage cover

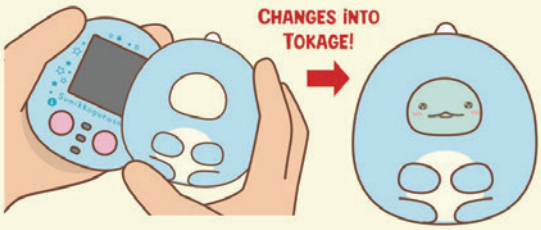

Touch Bonding

Sumikko will react to your physical touch interactions!
If you physically interact with Sumikko a lot, it will be in a good mood!

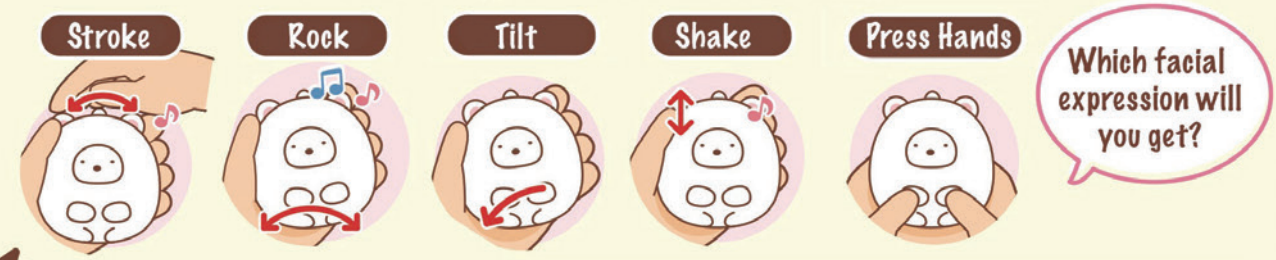

If you place Sumikko on a flat surface, it will sleep peacefully!

If you startle or frighten Sumikko, it will be unhapppy!

This will happen if you shake me violently, or shake me when I am sleeping.

This will happen if you turn me upside down.

Sumikkos are timid creatures. Interact with it gently!

Sumikko's expressions will change depending on its mood!

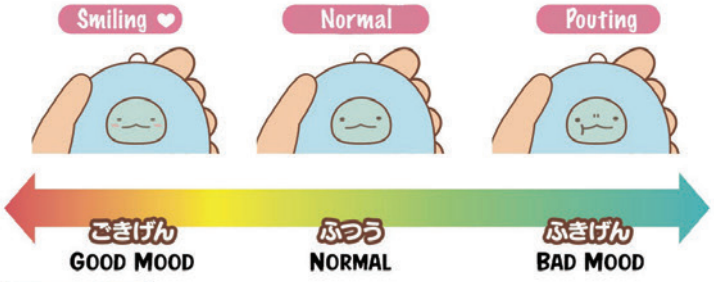

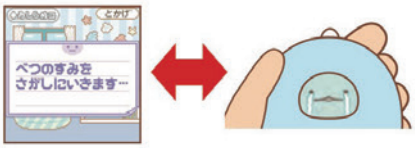

When Sumikko is crying, it has run away! Do Touch Bonding with Sumikko to bring it home!

Sumikko's expressions will change depending on their status in their rooms!

13 Sumikko Market

You can purchase Food, Furniture, Toys to be used in **9 Sumikko Rooms**.
You can purchase Traps to be used during **10 Sumikko Collecting**.

① Select which category of item you want to buy:

わな = Trap　　ごはん = Food
かぐ = Furniture　　おもちゃ = Toys

② Select the item you want to buy.

SumiCoins you have left

Total price to pay

Number of items you currently own

Amount you are buying

③ Select the amount of the item you want to buy.

Sometimes, other Sumikkos may surprise them with presents!

14 Library

You can check the following Books at the Library.

Sumikko Collection — You can view all the Sumikkos and Minikkos that you have caught.

Trap Item Book — You can view all the Trap Items that you have unlocked by obtaining or buying.

Food Item Book — You can view all the Food Items that you have unlocked by obtaining or buying.

Sumikko Collection

① Select the category of Sumikko. You can check each Guest Sumikko.

② Press L - Button to cycle through the various pictures. Press R - Button to view the full screen illustrations of the characters.

Trap Item Book

Select the Trap Item you want to view. There's also an item description of each item.

Food Item Book

Select the Food Item you want to view. There's also an item description of each item.

15 settings

You can change the Date, Time, Birthday, Volume, and Screen Brightness. You can also erase gameplay data.

Date

Similar to steps in ❺ Initial Setup, you can set the date here.

Time

Similar to steps in ❺ Initial Setup, you can set the time here.

Birthday

Similar to steps in ❺ Initial Setup, you can set your birthday here.

- Your birthday is a special day. You might get a surprise!

Brightness

You can set the screen brightness from level 1 to 5.

When you first start the device, the brightness and volume are defaulted to level 3.

password

You can obtain special items from passwords! Passwords are released on Takara Tomy website. Visit the website for more details.

Volume

You can set the volume from level 0 to 5. If you select 0, the device is muted.

Reset

Resetting the device will clear all gameplay progress.

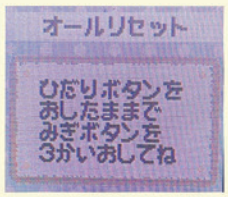

After selecting Reset, this message will appear. To complete the reset process, long press L button, while pushing R button 3 times.

⚠ TAKE NOTE | Once data is reset, you cannot recover the previously erased data. Be careful.

If these things happen...

Device not turning on

Even if the battery replacement screen does not appear, the battery ma be dead. Follow the instructions on Page 2 on how to change batteries.

※ If you encounter any other difficulties, check Takara Tomy website.

Screen has no display, unresponsive, or looks funny

Long press the R - Button for 3 seconds or longer. If this doesnt help, press the Reset Button (Check Page 2 to find where the Reset Button is located).

More Info Takara Tomy Sumikko Friend Search

Passwords

Below are a list of passwords that I have collected. If you find any new ones that are not here, please let me know so tha I can update this guide.

Food Preferences

Below are a list of Tokage & Shirokuma's food preferences.

	Tokage	Shirokuma
Riceball	Indifferent	Indifferent
Hot Tea	Indifferent	Like ♥
Grilled Fish	Like ♥	Indifferent
Shortcake	Like ♥	Like ♥
Macaron	Indifferent	Indifferent
Octopus Wieners	Indifferent	Like ♥
Shaved Ice	Like ♥	Indifferent
Bread	Like ♥	Indifferent
Cat Food	Indifferent	Dislike
Dino Cookie	Like ♥	Indifferent
Triple Ice	Like ♥	Dislike
Strawberry Tea	Indifferent	Like ♥
Cat Grass	Dislike	Dislike
OmuRice	Like ♥	Like ♥
Caramel Custard Pudding	Like ♥	Like ♥